


wedi Tools® | Joint reinforcement tape 600mm, self-adhesive

- Thin-layer
- Quick to fit
- Bridges cracks

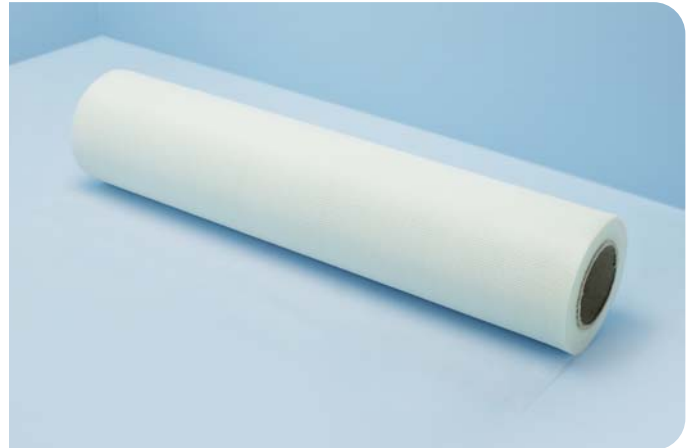

General product description

Self-adhesive wedi Tools reinforcement tape is an alkali-resistant glass fibre reinforced fabric that is used during the installation of wedi building boards.

Applications

- For reinforcing corner, connection and butt joints when using wedi building boards indoors
- To reinforce Construct (slotted/grooved) building boards to create curved, semicircular or rounded shapes

Surface requirements

The surface should be dry, free of dust and loose objects.

Processing

Self-adhesive wedi Tools reinforcement tape is applied centrally to the joint areas or across the entire surface with a 50 mm joint overlap. Mortar is applied to the fabric when the surface is tiled or plastered.

Technical properties

Type	alkali-resistant glass fibre reinforced fabric
Colour	white
Small mesh width	approx. 6 x 2,5 mm
Maximum tensile strength in accordance with DIN 53857 T1:	
Warp	≥ 1200 N/5 cm
Weft	≥ 800 N/5 cm
Maximum expansion under tensile strength in accordance with DIN 53857 T1:	
Warp	≤ 3,8%
Weft	≤ 3,8%
Tear strength after conditioning in accordance with ETAG 004 (embedding in an alkaline medium) in accordance with DIN 53857 T1:	
Warp/Weft	≥ 50% of the initial value
Mass per unit area in accordance with DIN 53854	79 g/m ²

Packing

- 50 m x 600 mm in a box

Storage

The packaged goods must be stored in a cool, dry and frost-free place and must be protected against sunlight. If the storage conditions are complied with, the goods will retain their mechanical properties for at least 24 months from the date of manufacture.

Safety notice

none